


WMP


VIDEO MOUNT PRODUCTS

Instruction Sheet For:


C-13B & C-13W

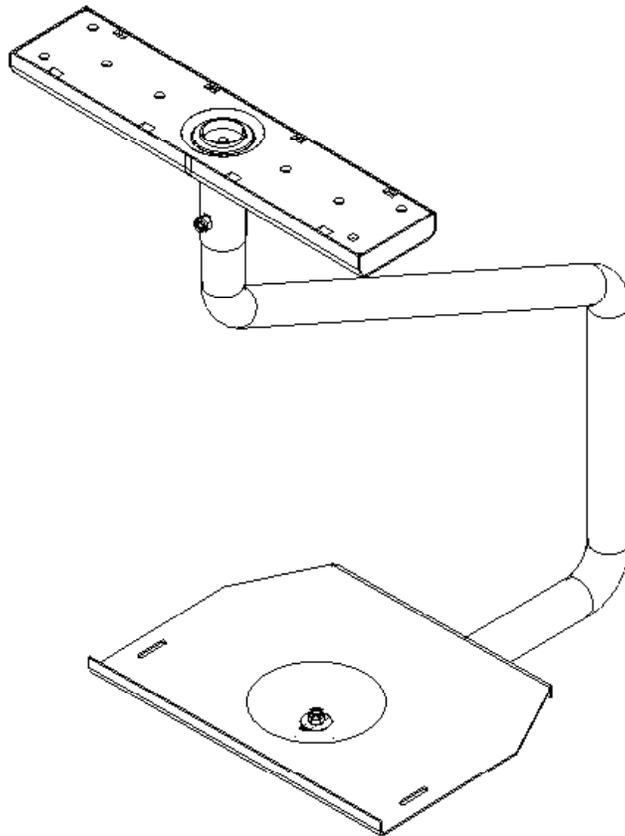


*For more information, please contact us at:
325 Log Canoe Circle, Stevensville, Maryland 21666
(T) 410.643.6390 / (F) 410.643.6615
www.videomount.com*

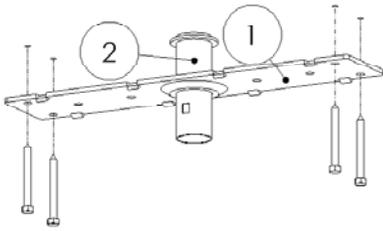


Step 2: Attaching the ceiling plate to the ceiling (Lag screws are not included)

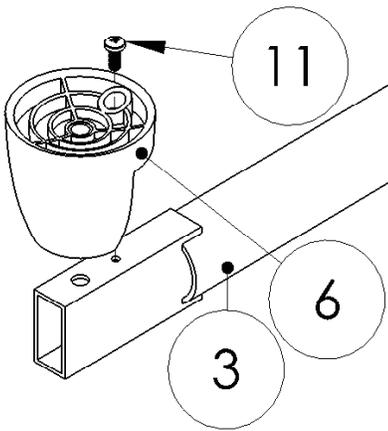

Step 3: Attaching the plastic connector

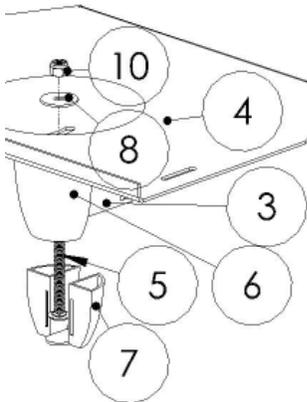

Step 4: Attaching the platform

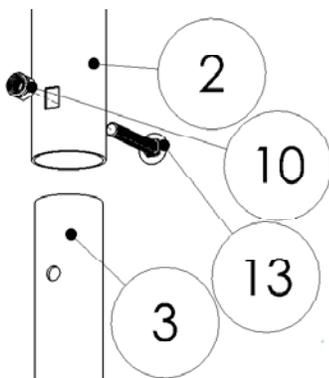

Step 5: Attaching the support tube to the ceiling tube

Step 1

Before starting, lay out all parts to your mount and match them to the parts list provided. Verify that you have all your parts before attempting to assemble the mount.

Note: Parts 12 and 15 will not be used in this assembly.

Step 2

Insert the ceiling tube (2) into the center hole of the ceiling plate (1). Mark the ceiling or desired mounting surface in preparation of installation of ceiling plate (1). Pre-drill if necessary and mount the ceiling plate (1) to desired surface.

Warning: Please verify that your mounting surface will support the combined weight of your mount, mounting hardware, and monitor. Also verify that the mounting surface is safe to drill through. If in doubt, please contact a professional installer.

Step 3

Attach the plastic connector (6) to the support tube (3) using the M5 screw (11).

Step 4

Insert the longer 5/16" screw (5) up through the bottom of the support tube (3) so it comes out the top of the plastic connector (6). Place the platform (4) onto the 5/16" screw (11) and secure the platform using the washer (8) and nylon nut (10). Attach the plastic swivel (7) to the plastic connector (6).

Step 5

Attach the support tube (3) to the ceiling tube (2) using the shorter 5/16" screw (13) and nylon nut (10).

Step 6

Snap both halves of the plastic cover (9) onto the ceiling plate (1). **Please verify that all nuts and screws are securely tightened.** After doing so, place the TV on the platform (4) and use the safety strap (14) by inserting the end without the grip through the slot on either side of the platform (4) going over your TV through the other slot in the platform and wrapping under the platform and cinching the strap tight.

Enjoy Your Mount!

WARNING: The installer of these products must verify that the mounting surface, ceiling or wall, will safely support the combined weight of all attached equipment and hardware. Video Mount products will not be held liable for the improper use or installation of its products.